

FUJI MICRO CASTING GUIDE SPACING



Guide spacing from tip

6'6"	2 5/8	5 3/4	9 1/4	13 3/8	18 1/8	23 1/2	29 5/8	36 3/4	45				
6'9"	2 3/8	5	8 1/8	11 5/8	15 3/4	20 1/2	25 7/8	32 1/8	39 1/4	47 1/2			
7'	2 3/8	5 1/8	8 3/8	12	16 1/4	21	26 1/2	33	40 1/4	48 3/4	--	--	--
7'2"	2 1/4	4 1/2	7 1/4	10 1/2	14 1/8	18 1/4	23 1/4	28 3/4	35 1/8	42 1/8	50	--	--
7'3"	2 1/4	4 1/2	7 1/2	10 3/4	14 3/8	18 3/4	23 5/8	29 1/4	35 1/4	43 3/8	51	--	--
7'6"	2	4	6 1/2	9 3/8	12 5/8	16 3/8	20 5/8	25 1/2	31 1/4	37 7/8	45 3/8	54	--
7'9"	2 1/8	4 1/2	7 3/8	10 3/8	13 5/8	17 1/8	21	25 1/4	30	35 1/4	41	47 3/8	55 1/2
8'	2 1/4	4 5/8	7 1/2	10 5/8	13 3/4	17 1/4	21 1/4	25 1/2	30 3/4	36	42 7/8	49 3/8	58 1/2

Guide spacing is for general purpose applications, you may choose to further refine. For more information please visit AnglersResource.net.